17' CURVED WATER SLIDE BM WAVE

Instruction Manual

INFLATABLE AMUSEMENT DEVICE

This (IAD) manual manufactured by Tent and Table ensures compliance with ASTM F2374, ASTM F2729, and ASTM F963 standards.

TENTANDTABLE.COM

17FT CURVED WATER SLIDE, BLUE MARBLE WAVE – OVERVIEW

Minimum staffing: 1 trained attendant per unit (2 if >1 entrance/exit). **Training:** Operators must review and comply with all Tent and Table manual guidelines. **Duties:** Patron's Safety! Enforce rules, supervise patrons, and maintain inspection records.

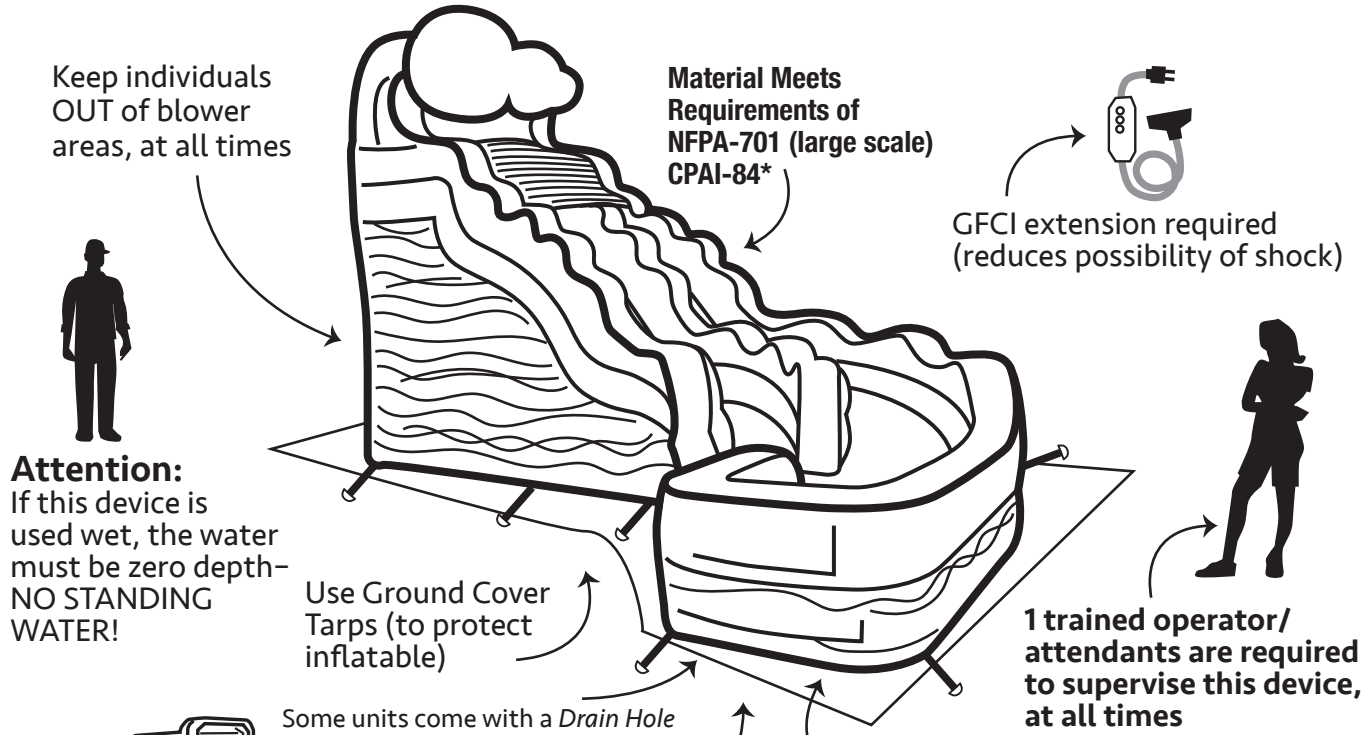

Keep individuals OUT of blower areas, at all times

Material Meets Requirements of NFPA-701 (large scale) CPAI-84*

GFCI extension required (reduces possibility of shock)

Attention: If this device is used wet, the water must be zero depth– NO STANDING WATER!

Use Ground Cover Tarps (to protect inflatable)

1 trained operator/ attendants are required to supervise this device, at all times

Some units come with a *Drain Hole* (water drainage, near landing)

Must be positioned on a FLAT, LEVEL SURFACE

Anchor Straps at base—secure with recommended stakes (refer to your state inspection requirements)

Commercial Inflatable Blowers needed 1.0 HP or 1.5 HP (see **spec page** and specs on the **safety Label** located on the inflatable device)

CHECK ALL SPECIFICATIONS LOCATED ON SAFETY LABEL– ATTACHED TO YOUR UNIT

∗ All Tent and Table inflatables are manufactured under a QA program meeting ASTM F1193 and F2374-19, using NFPA-701 compliant fire-retardant vinyl.

SET-UP STEP 1. (SAFETY CHECK LIST)

811

Call or Web Search Before you Stake

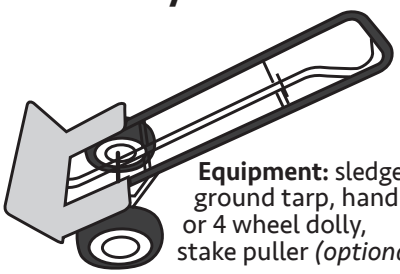

Equipment: sledge hammer, ground tarp, hand truck or 4 wheel dolly, stake puller *(optional)*

WARNING: Inflatables are very heavy —do not attempt to roll or move these games by yourself

- Do not inflate in high winds or rain— High winds are considered to be **15 mph** or higher
- Inspect the site, look for overhead and underground obstructions— such as utilities **(Min. 20ft. Clearance!)**
- Call your local utility to have utility lines marked (call 3–5 days ahead)— **call811.com** is a good resource— or 'click' 811 in Your State
- Use an adequate three wire extension cord, min. 12 gauge for 50ft. maximum length—never cut or remove the round grounding pin from the cord

SET-UP (SAFETY CHECK LIST - cont.)

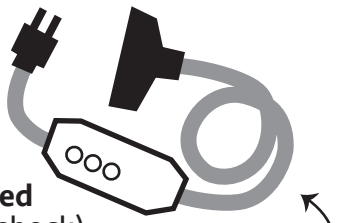

GFCI extension required
(reduces possibility of shock)
GFCI= Ground Fault Circuit Interrupter

A GFCI extension cord adapter can be purchased at most Do-It-Yourself type stores

- Use an adequate three wire extension cord, min. 12 gauge for 50ft. maximum length
- Check GFI at least once per event
- Always connect a GFCI extension cord adapter to any extension cord before plugging into a power source—this reduces the possibility of shock in wet environments
- Check the GFCI operation at least once per event
- Before staking unit into the ground, obtain marking and location information from the utility companies if there is a possibility of striking underground utilities
- Remove all occupants if wind becomes excessive—deflate unit, if wind continues
- **Important,** the operator/attendant is responsible for the safety of those using the inflatable amusement device

SET-UP STEP 2. (SITE ASSESSMENT)

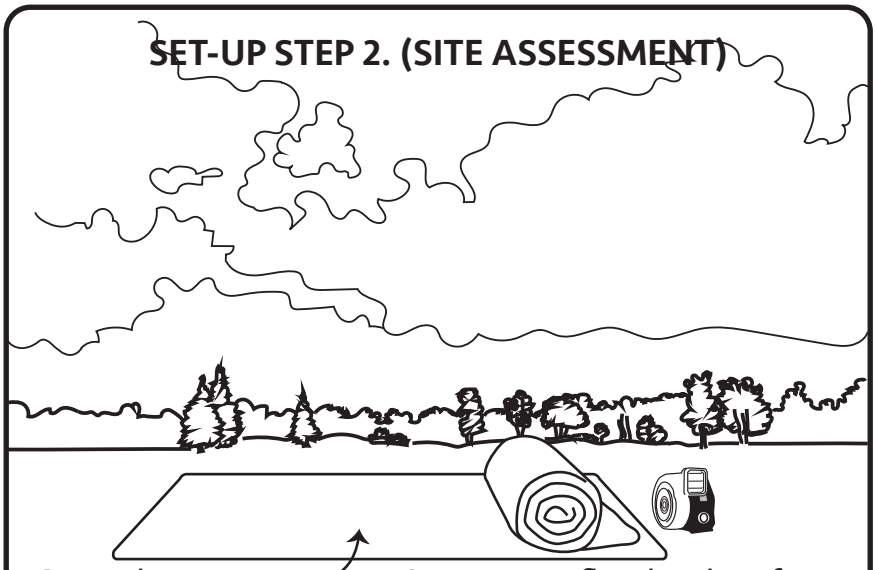

- Pick a location free from overhead utility lines, trees, roads, sidewalks, bodies of water and cliffs—or any hazard
- Any nearby debris and obstructions should removed
- Spread tarps (sold separately) under the inflatable amusement device location, to protect unit
- Locate the blower and power cord in an area that is not in a direct walkway—be sure the blower is on a flat and dry surface
- A minimum of 2 installers recommended

Recommended Tools and Equipment:
sledge hammer, ground tarp, hand truck or 4 wheel dolly, crowbar/stake remover safety goggles, GFCI extension adapter, 50´ 12AWG extension cord

SET-UP STEP 3. (UNROLL AND POSITIONING)

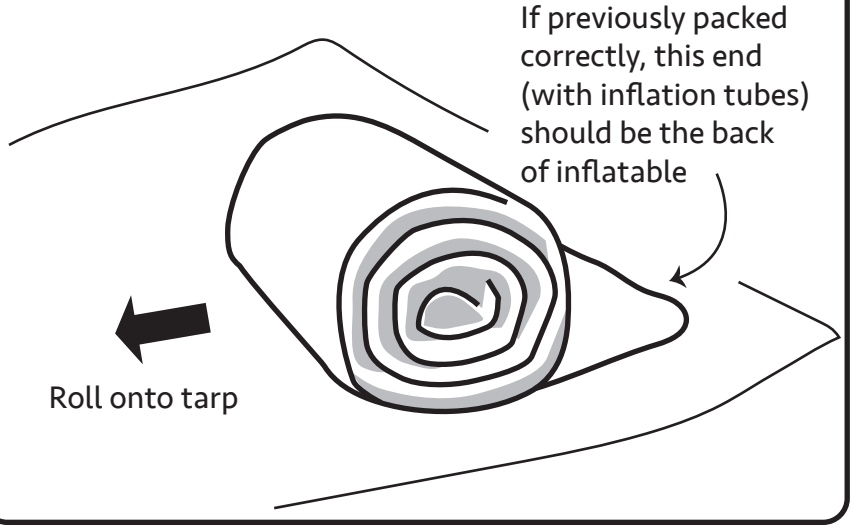

- Carefully place unit, using dolly, at one end of tarp—it's easier to move at this stage!
- See (**drawing**), find back end of inflatable device and roll onto tarp
- *(Make a mental note or snap a picture of how the inflatable is folded and positioned as you unroll the game. This will be beneficial when you re-roll the device later)*
- Check location, make any adjustments before inflation—unfold device completely
- Start the staking process— place stakes through the inflatable anchor straps, all around the inflatable amusement device—see (**pg. 3**) for proper staking

SET-UP STEP 4. (INFLATION TUBES)

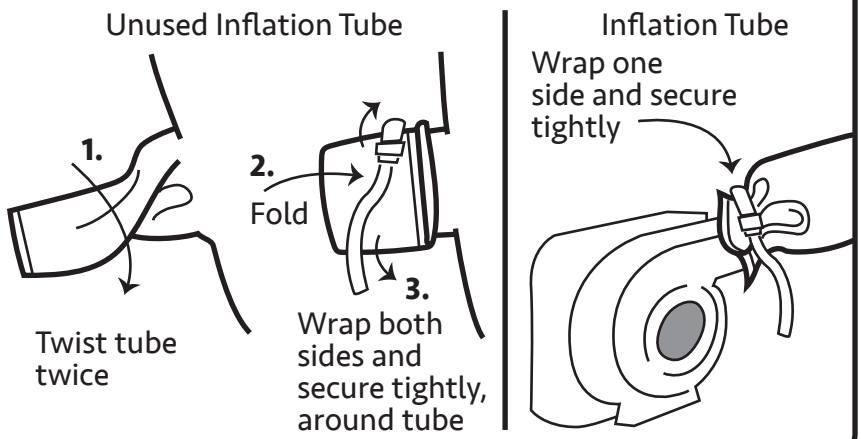

- Plug the blower power cord into the GFCI extension, then plug the GFCI extension into the extension cord—connect the fan cone to the inflation tube
- Two inflation tubes used for this game
- Close off the unused inflation tubes
- Plug the extension cord into the power source
- Check the inflation tube to make sure it is properly attached to the blower fan —the inflation tube must be properly closed around the blower outlet cone to prevent large air leakage
- Close all zipper vents (if applicable)

SET-UP STEP 5. (PROPER STAKING)

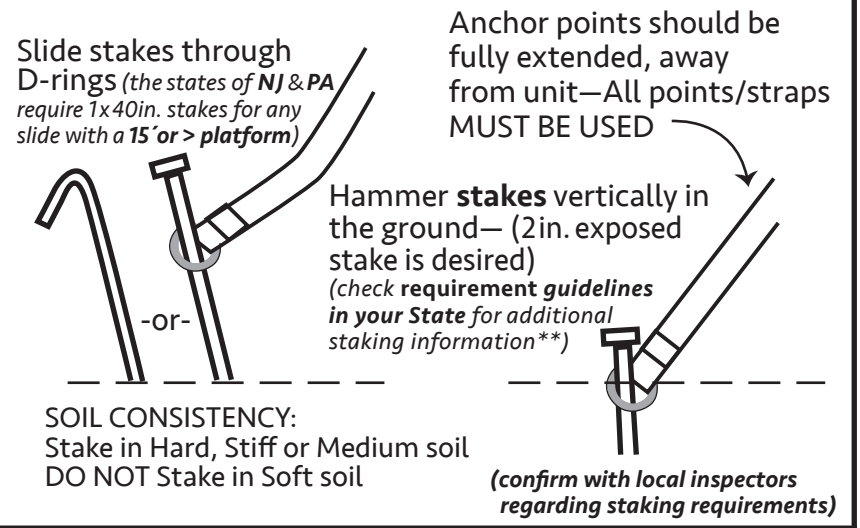

* * Each inflatable is shipped with steel anchor stakes—**Staking** requirements may vary in States that follow ASTM guidelines. Some States require adherence to the ASTM recommended guideline; **1″** in diameter **x 18–24″** in length. *(stake upgrades are available at TentandTable.com)*

- Locate the on/off switch (if applicable) on the blower and turn it on—observe the inflation of the inflatable as it rises
- When inflation is almost finished, check the positioning of the stakes—hammer them all the way in— see (**step 5**)
- Note: For medium soil conditions, larger stakes will increase pullout capacity*
- Once inflated, check for any damage
- When properly inflated, all inflated areas of the game will become pressurized and firm

Important: Keep blower on, continuously, for the duration of your event— to maintain proper inflation

(Alt. Anchoring— *See table, last page*):
For indoor installations or surfaces where stakes cannot be used, ballast such as **50 lb sandbags** or water barrels per anchor point may be substituted if permitted by local regulation

OPERATING INSTRUCTIONS

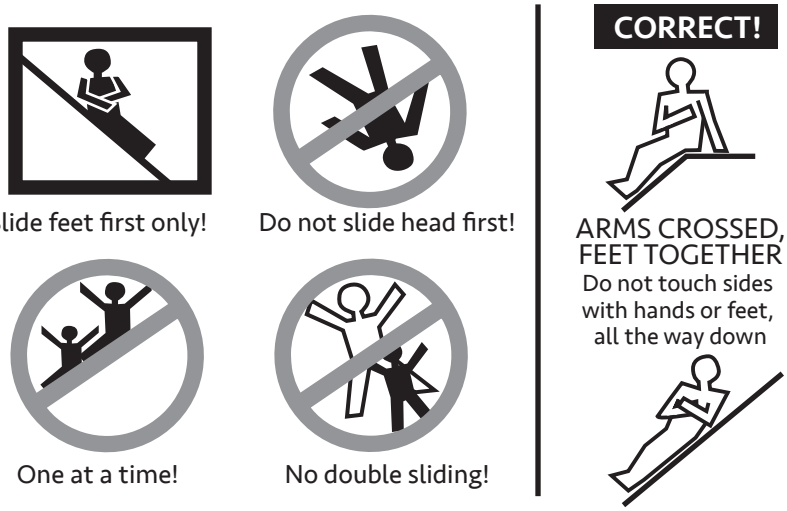

(FOR INFLATABLES WITH A SLIDE)

The following instructions must be read and adhered to by all operator/attendants regarding this inflatable device:

- Trained attendants should be positioned at the entrance and exit of device
- Attendants must be at least 18 years old
- Trained operator/attendants should assist the movement of all child patrons as they enter and exit the amusement device
- Attendants should remove all debris from the inflatable prior to allowing persons to enter or climb on inflatable
- Trained attendants should only allow persons of the same size and age on the inflatable device at the same time— **(check capacity on device warning label)**

OPERATING INSTRUCTIONS - cont.

No Sharp Objects | No Running–to Enter | No Food or Drink

No Chewing Gum | No Cell Phones | No Loose Objects in Pockets

OPERATING INSTRUCTIONS - cont.

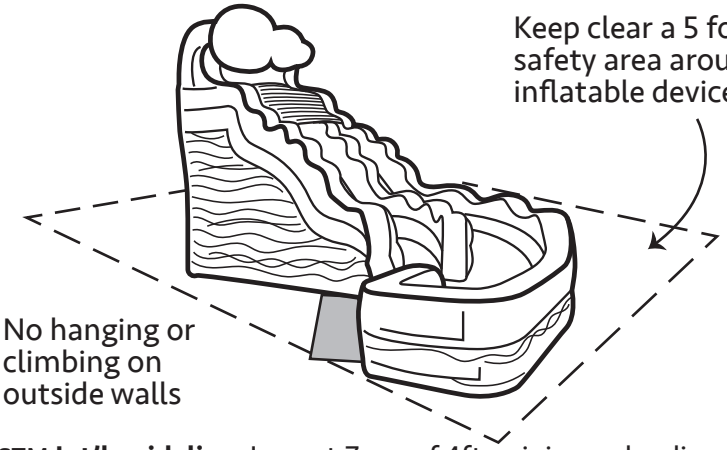

Keep clear a 5 foot safety area around inflatable device

No hanging or climbing on outside walls

ASTM Int'l guideline: Impact Zone of 4ft. minimum landing zone at entry, exit, or any uncontained edge, to lesson amount of force—center either a **4x4, 4x6 or 4x8 mat** at each opening

OPERATING INSTRUCTIONS - cont.

STOP operation in these conditions:
rain, snow or lightning—do not use device when this occurs
Monitor the weather throughout the day, check for high wind

15 MPH!

The inflatable should not be operated if the wind exceeds 15 mph, or at temperatures of less than 40º F

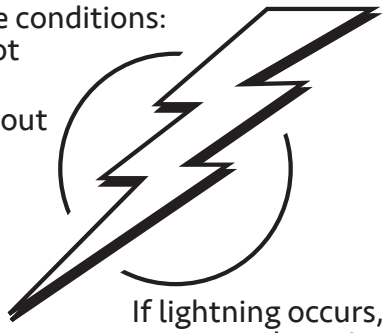

If lightning occurs, evacuate the unit immediately—unplug power

- Patrons with medical conditions, pregnancy, or severe disabilities prohibited from using this Inflatable amusement device
- Attendants should make sure that no one enters the inflatable device with **shoes** on, eyeglasses, jewelry, **sharp objects**, food/drink, phones, or gum
- Attendants should observe patrons at all times while they are in the inflatable
- Attendants should be close enough to be able to warn against flips, piling on, wrestling, bouncing against side, grabbing net or bouncing too close to each other—attendant should ask anyone doing these things, after being warned, to leave the inflatable device immediately
- Whistle use required for attendants
- No running to enter the inflatable device

- Attendants/patrons should be aware of the warning/spec sign, on the inflatable, indicating capacity (for this device)
- **Attendants should watch for any signs of deflation such as sagging, wrinkling or distortion**—if observed, the attendant should ask the people in the inflatable to evacuate, calmly and safely
- Attendants should keep all spectators outside the inflatable amusement device and at least 5 feet away from the sides
- Starting line is 48 inches from the entry of the inflatable amusement device
- Mats must meet: **ASTM standards–F1292 (2 in. thick gym mats)**
- Prohibit excessive rough play by occupants —*blow whistle*
- In times of excessive heat monitor the heat inside play area and slide surface

- Do not allow any individual in the rear of the game or near the electric blower at any time
- Deny entry if any patron poses a risk to others— or, if they consumed alcohol or illicit drugs
- **15mph** wind equals; dust and loose paper rising and movement of small branches —Hazardous winds; small trees sway and large branches are in motion
- Check the blower/inflation tube regularly to ensure there isn't any excessive leakage
- Check stakes regularly
- Keep airborne trash/leaves clear of blower intake

DEFLATION AND FOLDING

Before deflation, remove all accessories that may be applicable to your unit—also be sure to use a quality broom and sweep the surface of the game free of any debris

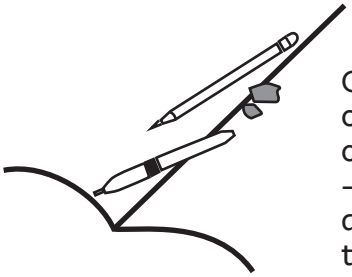

Check to make sure that no sharp objects have fallen into the seams of the game, Eg. pens, pencils, etc. —items such as these can cause damage to the inflatable during the rolling up process

- **Before deflating;** Inspect for any damage and repair as necessary
- **Clean** inflatable amusement device(s) **and dry**, after use—by running air through it
- Unplug blower at the power source
- Loosen first inflation/deflation tube strap and remove tube from blower cone —make sure tube is pulled away from the inflatable and is straight
- Loosen second inflation/deflation tube strap and pull tube away from inflatable
- Open all deflation flaps
- While the inflatable amusement device is deflating, remove stakes, put blower fan away, and store extension cord(s)

DEFLATION AND FOLDING- cont.

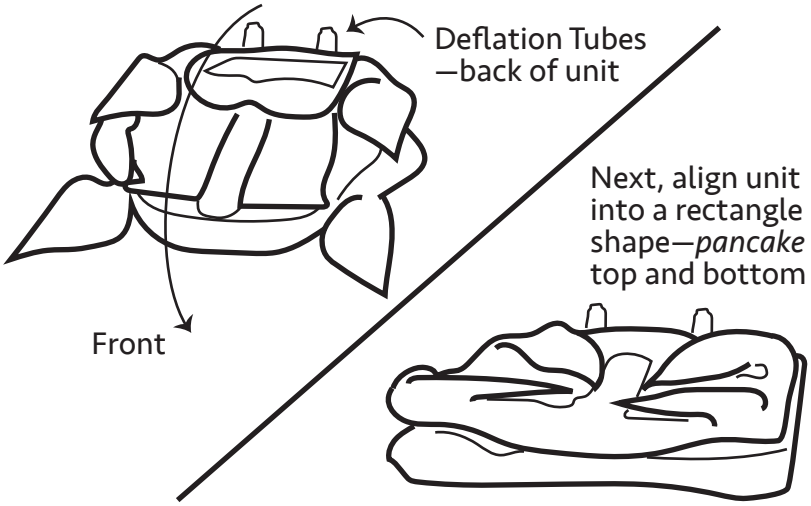

- Two people, minimum, needed to fold
- Guide inflatable inward and to the front —while the air is being released
- Begin folding inflatable amusement device—pull vertical peaks/shapes toward the front, to flatten and release more air
- Next, situate top of unit over the bottom, *pancake* style—and fold peaks into the middle, see (**drawing**)
- Once you make the folds, you will notice that air is still inside the game—start at the front and walk, in stocking feet, to the back—removing most of the air
- Work the air out towards the back of the unit through the inflation tube(s)
- Commercial inflatables take 5–15 minutes to completely deflate

CLEANING THE INFLATABLE

- Do not use M.E.K.(methyl ethyl ketone) to try and clean your inflatable, as this will damage the vinyl
- Do not use a chlorine based cleaner or bleach, as this may damage the threads
- Do not use any cleaning products containing alcohol to try and clean your inflatable device, as this will damage any printing that may be on your inflatable
- Use water and/or mild cleaner sparingly by *sponging*
- Excessive water or cleaner may penetrate the seams and collect inside of the tubes —also, *bubbling* from the seams during operation may occur

FINAL FOLD AND ROLL

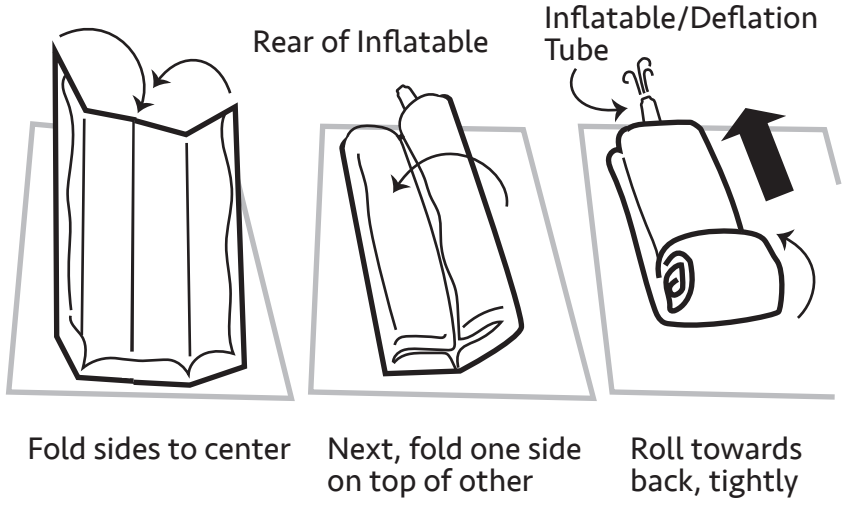

- Fold both sides into the center of the inflatable—each person should place one foot on the inflatable at the fold line
- Fold at the same time—walk down the game and straighten out the seam
- Repeat this procedure for the other half of the game
- **The roll;** make sure that at least one of the inflation tubes is extending—as you roll the unit up, air will escape and the inflatable device will roll much better

Important: Twist the beginning of the 'roll' *very* tight

- Start your roll from the FRONT (opposite the inflation tube)
- As you progress, be sure that the roll is straight and tight

SLIP KNOT (for rolled inflatable)

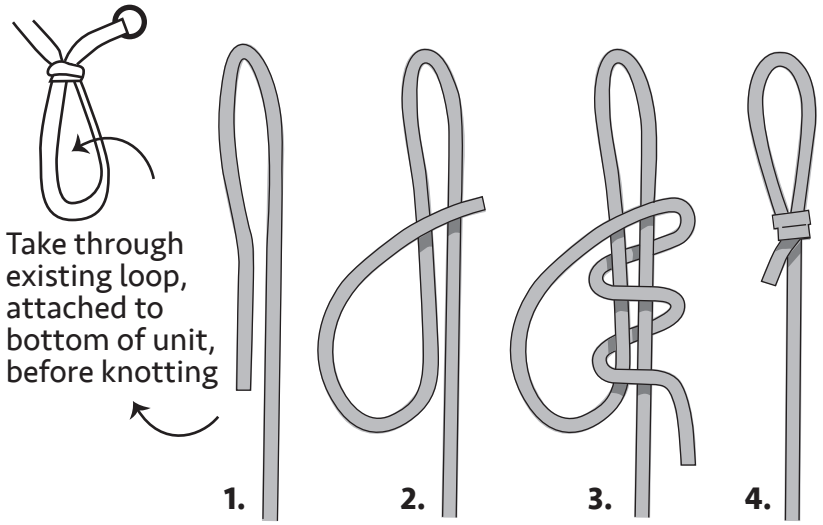

- Near the end, allow time for the last bit of air to escape
- Locate tie strap—pull to top of roll
- We recommend you tie a tight *slip knot* around the roll
- Stand the inflatable amusement device on end—place the transport/storage bag over one end of the game and work it down as far as you can

STORAGE BAG - (you're done)

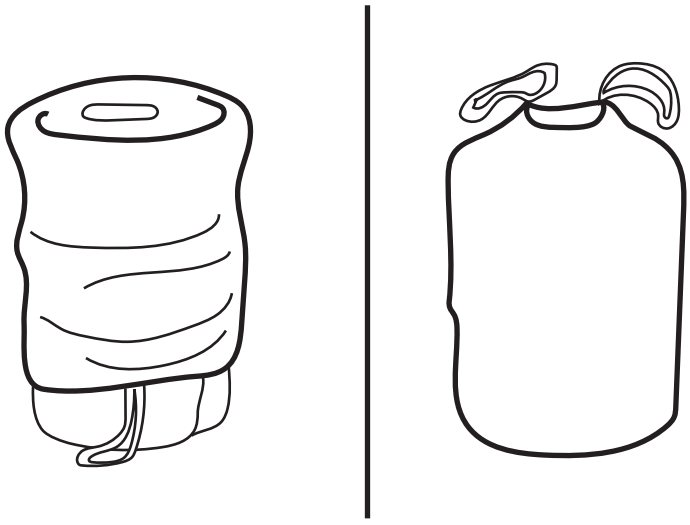

- It is important that you work the bag down to the top of the roll—flip the unit and pull the bag up over the top of the inflatable amusement device
- Tie the bag closed
- Lay the game onto a dolly and roll it to your designated storage area

WARNING: Inflatables are very heavy. Do not attempt to roll or move these games by yourself. When lifting any type of heavy weight, be sure to lift with your legs and not your back.
If in doubt about your ability to move something, get help.

INFLATABLE DEVICES WITH SLIDES

Bladder Use and Replacement Instructions:

Inflatable and Combo Devices with ***Slides***; use a BLADDER system to keep the slide wet. They are included with every new inflatable device.

Water Proportional Control Valve Instructions:

(unit shown is for illustration purpose only)

BLADDER SYSTEM (WITH HOSE)

(Drip/sprinkler located above platform)

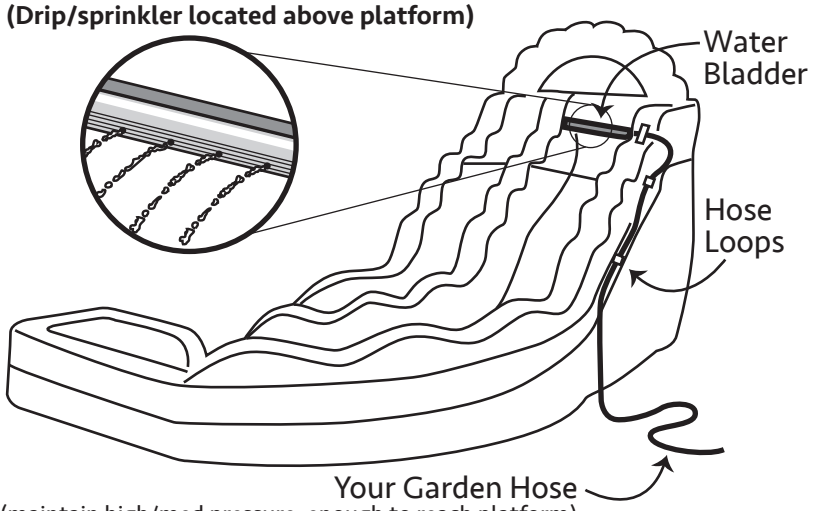

- Just before inflation, connect the bladder system
- Most water slides have water bladder systems built into the unit—it keeps the slide wet
- Start by taking your garden hose through the hose loops (side of inflatable)—begin at lowest loop
- Then, locate bladder opening and attach hose
- After the unit is fully inflated and you're ready for use, turn on water supply—leave it running for the duration

Note: The *landing* will catch the water that runs from the slide—DO NOT add water to the landing—

Make sure hose isn't dripping outside of unit!

WATER LEVEL / DRAINAGE

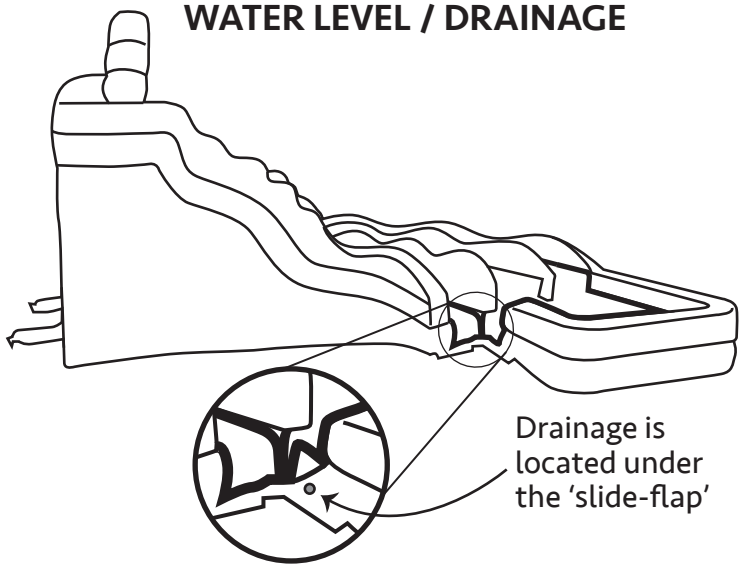

- Water level should be next to nothing– if the level increases over one inch, it is recommended to drain out some of the water, from landing
- Drainage holes are located under the slide-flaps, that extend over the side of the inflatable device

BLADDER REPLACEMENT

- If a new bladder is needed, it should be attached to the original bladder
- Zip-tie new bladder to the vinyl strip, at the edge of original bladder, through grommet holes— make sure water holes point downward

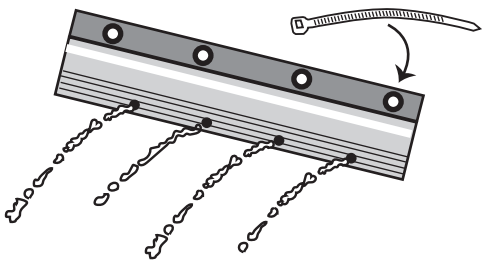

IMPORTANT:

- This will keep your Bladder System from blowing out
- Any questions about the Valve, contact **TentandTable.com**

Water Proportional Control Valve Instructions:

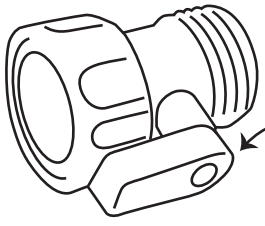

Attach **Valve** to the end your hose, before connecting to the bladder—
This Control Valve 'proportions' water pressure to keep the system running with even pressure

DIRECTIONS FOR USE:

(operator/attendants should be assisting patrons as they enter and exit the inflatable amusement device)

- Communicate to all patrons– safety, using the inflatable amusement device, usage and dress code rules
- Carefully enter inflatable amusement device at the entrance and climb the incline slowly
- Careful not to collide into other patrons, be respectful of others safety at all times
- When patrons are ready to slide, do so in a seated position, one at a time, with proper form (patrons may exit carefully out the entrance tunnel, if they do not wish to slide)
- Exit the device, after sliding, as careful as possible—no jumping off the edge of the device
- As one patron exits, allow another to enter— remember to maintain the correct device capacity (total number of patrons allowed, at one time)

EVACUATION PLAN:

In the case of rapid deflation or poor weather during operation (*Important!*: partial deflation time is quick, 3 to 5 minutes)– Attendants should follow these steps:

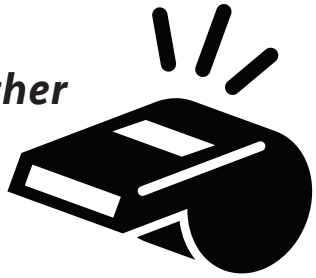

- Operator/attendant should a **blow whistle** to **evacuate patrons** immediately and safely— aid child patrons as they exit. Then tell them to **step away** from inflatable device!
- Any **patrons on elevated platforms** should climb down the stairs, backwards — if a patron is sitting ready to slide, **let that one slide down,** only one. (for units with slides)

- **Deflate** inflatable amusement device if necessary (eg: high wind)— re-inflate when safe.
- Call medical responders if anyone is injured.

DEVICE NAME: 17´ CURVED WATER SLIDE, Blue Marble Wave	
DIMENSIONS: 26´x 19´ x 17´	**DEVICE CAPACITY:** (1) Patrons
INFLATION/DEFLATION TUBES: (1)	**DEFLATION FLAPS:** (2)
ANCHORS / TIE DOWNS: minimum holding force of 360 lbf per anchor (11) / (4)	**MINIMUM HEIGHT / MAXIMUM HEIGHT:** 34 in. / 60 in.
BLOWER: (1) - 1.5 HP	**MAXIMUM WEIGHT:** 200 lbs. per patron
MINIMUM NUMBER OF TRAINED ATTENDANTS: (1)	**SKU (model/theme):** K-XSL-WDCRSL-17BMW

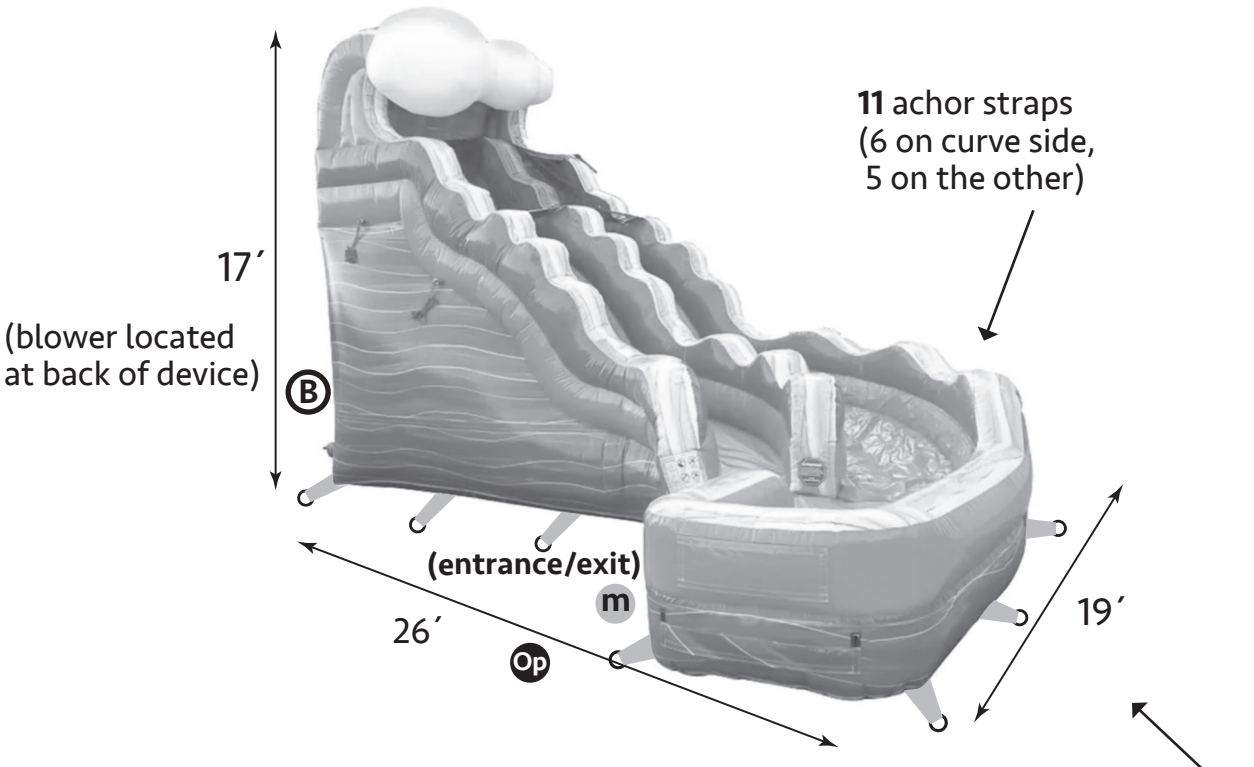

Staking for this Device: (15) total — 11 anchor straps / 4 tie downs

Ⓑ = BLOWER LOCATION Ⓞp = OPERATOR LOCATION ⓜ = MAT LOCATION

MAINTENANCE and INSPECTION

- Determine a cleaning and preventative maintenance schedule to keep this device function properly
- The device can be easily cleaned with a cloth or light brush. Use a vinyl cleaner and rinse lightly, to remove detergent before storing.
- **DO NOT PACK THE INFLATABLE DEVICE WHEN WET.** If it wasn't dried properly, lay the unit out to dry at the earliest opportunity.
- The unit should be inspected regularly for damage. If there is evidence of tearing at the anchor points or vinyl panels, the inflatable amusement device should not be used until the repair has been completed.

REPAIRS

- Repairs made by anyone other than the original manufacturer, shall be made using the same construction method—with comparable materials—unless manufacturer agrees otherwise.
- To repair small tears up to 12" use "Single Patch Method" as follows.
- Cut an oval or round vinyl patch approximately 4" larger than the cut.
- Clean the area around the tear.
- Apply SX-69 vinyl glue on the patch and on the surface of the inflatable device.
- Allow the manufacture´s recommended drying time before applying the patch to the inflatable device as indicated on the label on the container.
- Place the patch covering the cut area and apply pressure for 1 minute. Refer to the glue manufacturer´s label for the recommended time for glue to dry once the patch is applied.
- If the "Single Patch Method" is not a viable option use PatchALL* for a non-glue repair until you can apply the "Single Patch Method" or send the unit to a repair facility.

DAILY CHECKLIST (quick check)

- **WIND:** Ensure maximum winds are less than the manufacturer´s recommended wind speed requirement for unit— For the duration of use **Max Speed 15mph**.
- **TEMP:** Ensure temperatures are greater than 40° F—(on days with excessive heat inspect slide).
- **CORDS:** Ensure that a minimum 12 gauge 3 wire extension cord is used with the blower and is connected to a CFCI (Ground Fault Circuit Interrupter).
- **BLOWERS:** No obstructions in the blower(s), blower intake and the unit´s inflation tubes.
- **TUBES:** Inspect blower inflation tubes, they should be in good condition and firmly fixed to blower.
- **INFLATION:** Ensure unit is properly inflated—with the blower pointing straight at device.
- **HOLES:** Visually inspect device for any holes or rips in the fabric or seams.
- **MULTIPLE DEVICES:** For inflatable devices with multiple units, check all connection points.
- **ANCHORS:** Ensure all tether and anchor points are secure. Check stakes.
- **ZIPPERS:** Ensure all deflation zippers and flaps are closed.
- **SEAMS:** Walk around the unit and inspect seams and search for wear damage.

* PatchALL are clear polyurethane patches or tape. They are quick, flexible, long lasting, airtight and waterproof—with no gluing. Visit **TentAndTable.com** for all your Inflatable Accessories including; blowers, impact mats, dollies, hand trucks and repair kits.

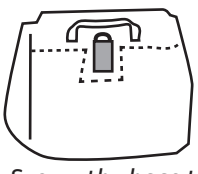

Table of Anchoring Weights (sandbags):

Inflatable Size	Recommended Weight per Anchor Point
Small bounce devices	50–75 lbs per
Regular commerial bounce houses	100–300 per
Large slides inflatable deices	200–500 lbs per

Secure the bags to the anchor points using strong rope (at least 1/2 inch diameter braided polypropylene rope)

MODIFICATIONS: This inflatable amusement device shall not be altered in any way that constitutes a major modification without written from the device manufacturer.

CHECK ALL SPECIFICATIONS LOCATED ON SAFETY LABEL– ATTACHED TO YOUR UNIT

(SAMPLE LABEL – Label Located on Inflatable Device)

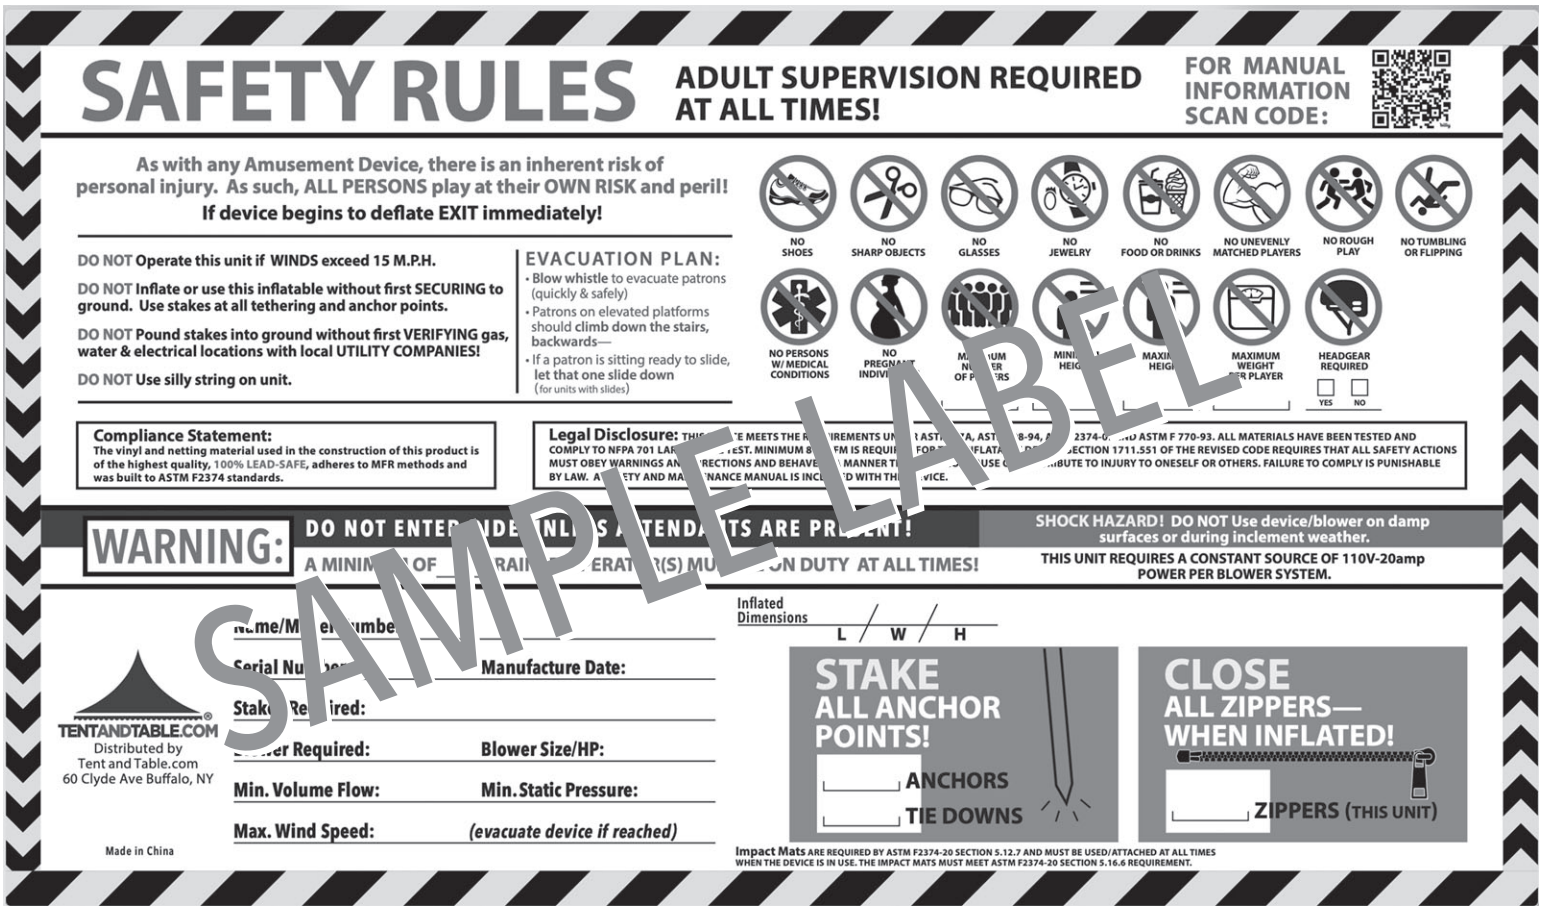

SAMPLE LABEL

AIR LEAKING

OR BUBBLES FROM SEWN SEAMS IS NORMAL DURING OPERATION OF THIS INFLATABLE

BLOWER MUST BE OPERATED CONTINUOUSLY DURING USE/PLAY!

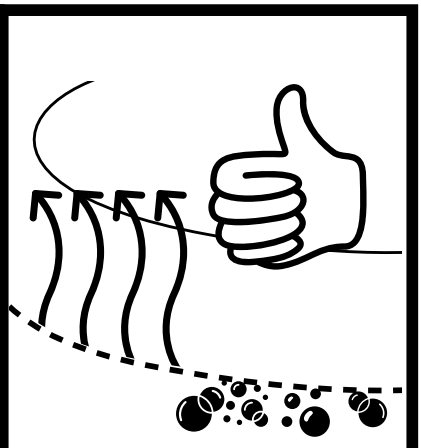

INFLATABLE INSPECTION CHECKLIST

(consider photocopying this clean page, for future use)

DATE	BEFORE	AFTER	DETAILED CHECKLIST (print version)
			The unit is clean and free of dirt and debris
			There are no visible holes in the inflatable or netting
			The blower(s) is/are the correct size for this inflatable
			The blower(s) is/are functioning properly
			The blower's intake is clean and free of any obstructions
			All stakes are secured properly and undamaged
			All accessories are in good usable condition
			All warnings and instructions are visible and legible
			Internal water bladder system is functioning properly
			Seams appear strong and undamaged
			That no moisture is present in, or on, the inflatable
			That no moisture is present in, or on, the blower

CHECK OFF DATE BEFORE AND AFTER EACH USE OF THE INFLATABLE (for entire list)